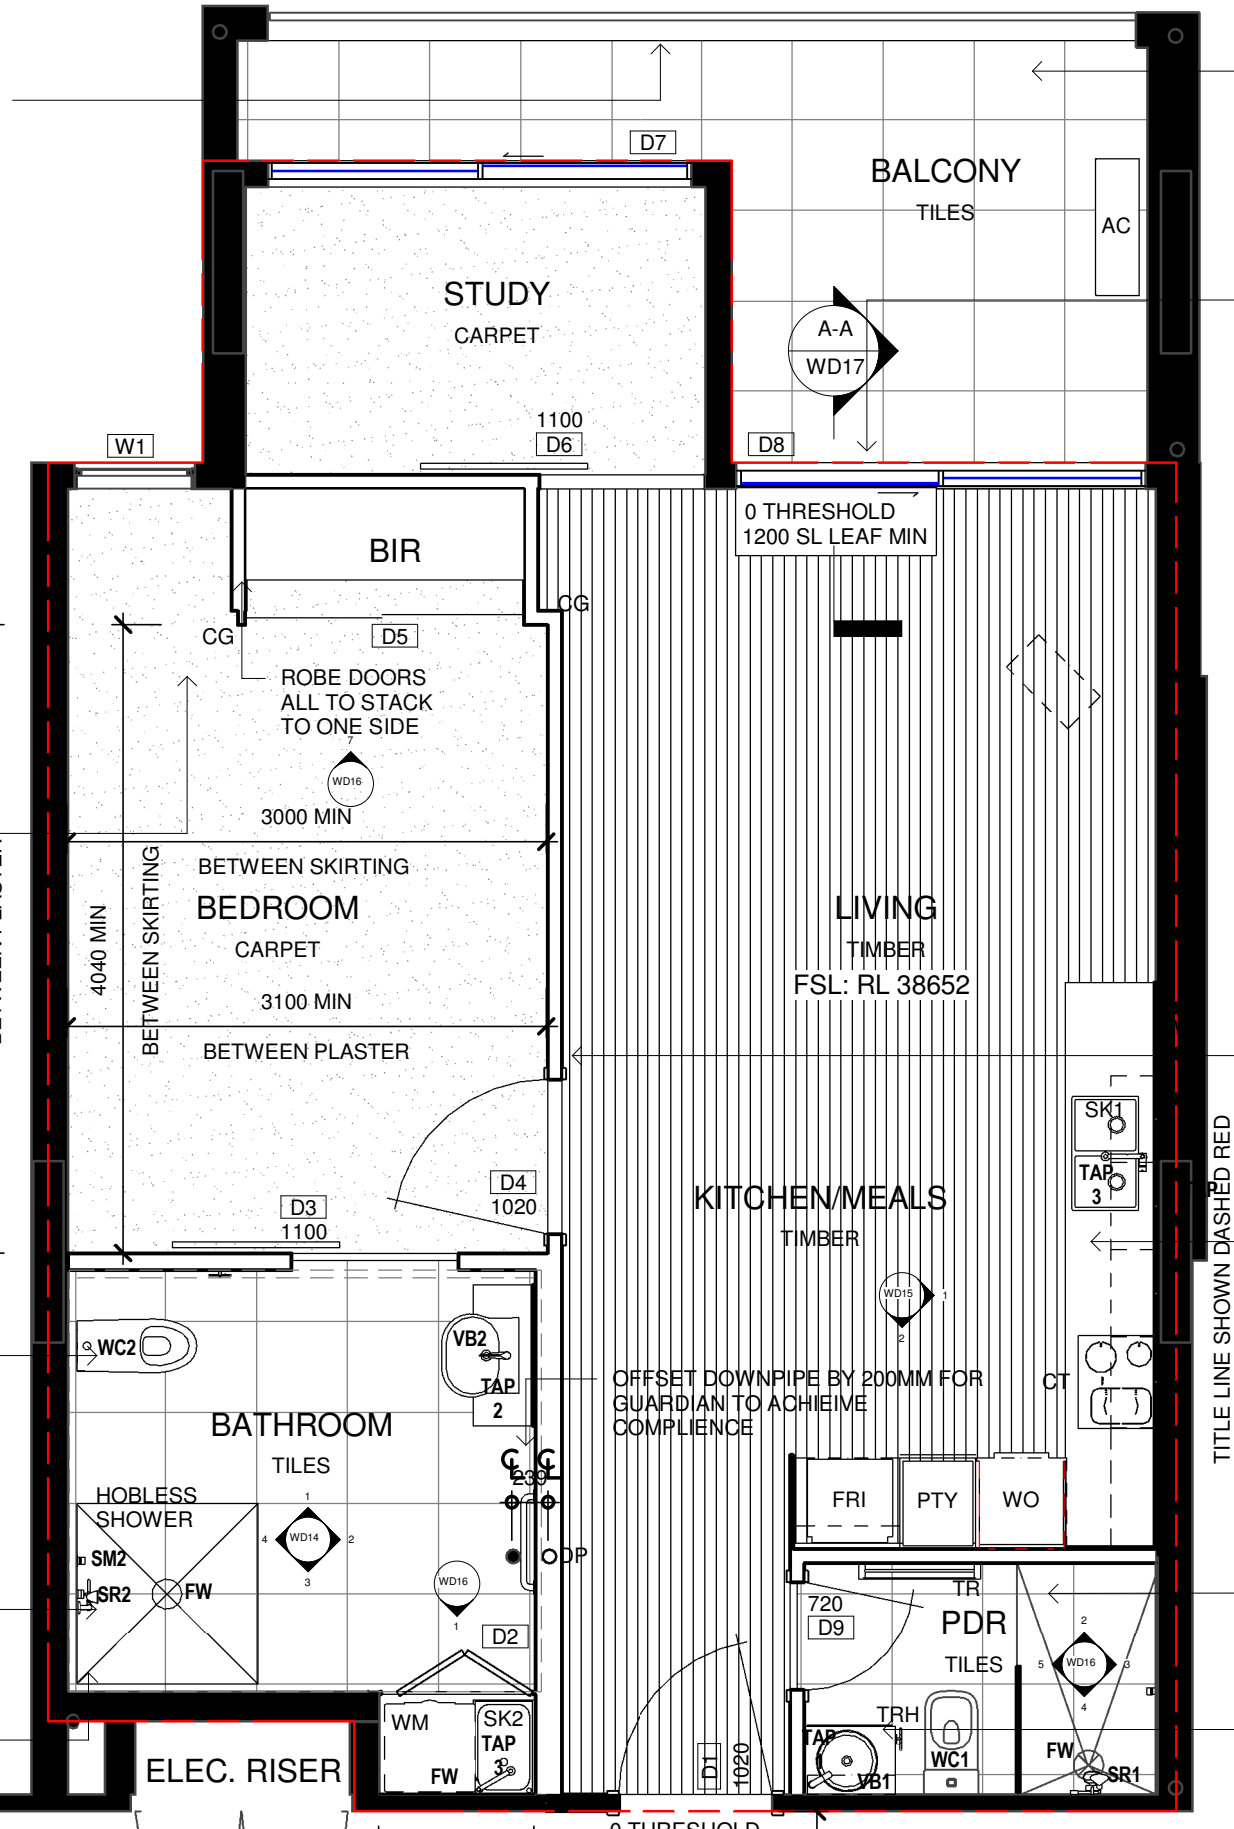
BALCONY
TILES
AC
D7
STUDY
CARPET
A-A
WD17
1100
D6
W1
D8
0 THRESHOLD
1200 SL LEAF MIN
BIR
CG
CG
D5
ROBE DOORS
ALL TO STACK
TO ONE SIDE
WD16
3000 MIN
BETWEEN SKIRTING
BEDROOM
CARPET
3100 MIN
BETWEEN PLASTER
4040 MIN
BETWEEN SKIRTING
LIVING
TIMBER
FSL: RL 38652
SK1
TAP
3
D4
1020
D3
1100
KITCHEN/MEALS
TIMBER
WD15
WC2
VB2
TAP
2
OFFSET DOWNPIPE BY 200MM FOR
GUARDIAN TO ACHIEIVE
COMPLIENCE
CT
BATHROOM
TILES
239
HOBLESS
SHOWER
WD14
SM2
SR2
FW
ODP
WD16
D2
FRI
PTY
WO
TR
720
D9
PDR
TILES
WD16
TRH
WC1
FW
SR1
WM
SK2
TAP
3
FW
ELEC. RISER
D1
1020
VB1
TITLE LINE SHOWN DASHED RED